

Moisture and Nutrient Management System for the 21st century

STP/STPS Series Installation Instructions



Prescription Tillage Technology, LLC.

1735 E. Main Street

Lamoni, Iowa 50140

712-357-1149

Prescriptiontillage.com

<u>Safety</u>

A brief description of signal words that may be used in this installation brochure:

Note	Used to address safety practices not related to personal injury.					
A Caution	Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.					
A Warning	Indicates a potentially hazardous situation that, if not avoided, could result in serious injury or death. It may also be used to alert against unsafe practices.					
A Danger	Indicates an imminently hazardous situation that, if not avoided, will result in serious injury or death. This signal word is to be limited to the most extreme situations.					

A WARNING	A Danger									
To Avoid Crushing Injury Or Death Install Service Locks Before Performing Any Maintenance Or Adjustments Under Machine.	Consult your implement and tractor operator's manual for correct and safe locking position of the unit in the upward or raised position.									
	FAILURE MAY RESULT IN PERSONAL INJURY OR									
	DEATH.									
	A Danger									
Avoid serious injury										
from falling. Do not ride on machine.	Do not ride on top of the planter unit, serious									
	injury or death will occur.									



Danger

Servicing machine in the upward or raised position; position locking devices in proper position and or install safety stand to prevent accidental drop or fall and injury.

	A Warning								
WARNING SAFETY SHOES REQUIRED	When handling blades wear protective foot- wear such as steal toed boots. No open toed shoes.								
	A Warning								
PINCH POINT CAN CAUSE SEVERE PERSONAL INJURY	Only use hub bosses to rotate STP True- V blades. Do not place fingers between blades during rotation.								
WARNING	AWarning								
Sharp edges Watch your fingers	Blades are sharp, wear leather gloves when handling and installing.								

STP and STPS True-V Installation Instructions:

Note: Always View from the Rear of the Planter for Left and Right Sides

For: Kinze, John Deere, Harvest International, Horsch, and White-Precision:

WARNING: Blades are sharp use leather gloves and use caution.

A. Raise planter off the ground and secure with safety lock and safety stand. B. Remove gauge wheel arms.

- C. Remove scrapers.
- D. Remove existing blades.

Note: Blades should be equally spaced on each side of the shank.



Part Number Example: STP0015.00=[OD]00000L=[Side]

E Use $1 \frac{3}{4}$ "x 5/8 "R or L hand threaded bolts for installation of double roller bearing hub. WARNING: Left hand side of the unit uses left hand threads. Right hand side of the unit uses right hand threads.

STP Blade Installation; Standing behind the planter

Install the STP 15.00" Left and mate the STP 14.75 Right on the Left row units. Install the STP 15.00" Right and mate the STP Series 14.75" Left on the Right row units.

STPS Blade Installation; Standing behind the planter

Install or mate the STPS 15.00" Left with the STPS 15.00" Right on each Row unit.

- When mixing OEM blades and STP series blades; Lower seed depth setting around 1/4" for the STP and 1/8" for the STPS. Inspect seed depth.
- 2. The **STP-STPS** Series may require more down pressure vs the OEM blades in heavy moist stubble, wheel track compaction and certain soil conditions. PTT recommends 450 lbs of minimum Down pressure capability. Down pressure requirements should be checked periodically.

STP-STPS Series True-V Installation Instructions:



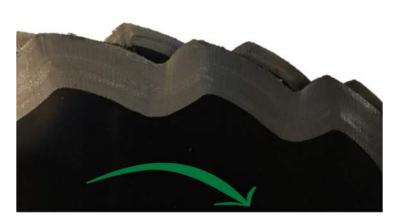


Figure1





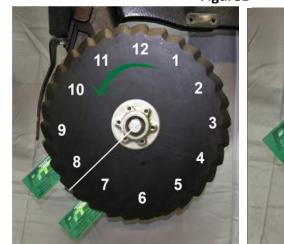

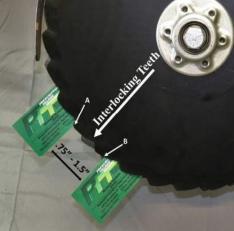



Left hand side [Figure 3]

Interlocking Teeth [Figure 4]

Rotating Hub Boss [Figure 5]

E. Position teeth in interlock contact (Figure 1, 3 and 4), at the 4:30 position (Figure 2) on the right-hand side or 7:30 position (Figure 3 and 4) on the left-hand side. USING TWO BUSINESS CARDS POSITION BLADE MATING CONTACT AT .75"- 1.5" (1.905cm - 3.81cm)(Figure 4). Using hub bosses; (figure 5) Rotate blades in opposing direction with resistance of 2-5 ft-lbs during blade rotation.

Note: Blades have an inside bevel allowing blade mating. Smaller blades rotate faster than larger blades. Out of spec pre-load may cause pre-mature wear. When rotating blades use hub bosses to protect from injury. (figure 5)

F. As blades wear, blades may need to be adjusted to maintain blade contact. Blades should be replaced at 14.25" Outside Diameter.

G. Figure 2: Depth wheels should make blade to depth wheel contact at the 4:00-5:00 position, preventing soil build up between blade and depth wheel, lessening row plugging. Reinstall scrapers and gauge wheels assemblies. Lift Gauge wheel assembly 1"- 2" [simulating planting depth]. Pull Gauge wheel assembly outward or away from True V Blade. Rotate Depth wheel in forward direction. Depth wheel should make light or constant contact with True V blade



	5	Speed					Security Lighting	Seeding Practice			Planting Depth	Required	Minimum	Rock Conditions				Soils CEC's				
	High	Medium	Slow	Conventional Till	Minimum Till	Fall Tillage ONLY	No-Till	Cover Crop	Stripper Stuble/	Green Plant	1" - Full	1/2" - Full	1/4" - Full	Very Rocky	/Shale	Low Sharp Gravel		18 CEC - 40 CEC	18 CEC or less			STP
*		*	*		*	*	*		*	*	*					•	6	*		STP	Minimum Till to Green Planting Alleviates the need for No-Till Coulters and Furrow Closing Devices	Series So
Applicable with management	*	*	*	*	*	*	*		*	*	*	*	*	*	*	٩	€	*	*	STPS	High Speed Planting Shallow Planting Sharp Gravel & Shale Rock Conditions	STP Series Soil Application Chart
		*	*	*) *	*	*		*	*	*					٩	•	*	*	STPF	Offset and Single Blade Applications CNH/ Great Plains/ CrustBuster	
	*	*	*	*	*	*					*	*	*	*	*	÷	6	*	*	STV	Standard True "V" Blade with Anti-Stubbing and Anti-Dulling Technology	hart